



Stream / Item No.

- Seawater Inlet
- Seawater Outlet
- Cooling Water Supply
- Cooling Water Return
- C, 14 Seawater Inlet
- 29 Cooling Water Pump (sea water)
- 33 Coolant temperature switch
- 34 Thermostat (SP=95°C)
- 35 Cooling Water Pump (coolant)
- 37 Coolant Temperature Sensor (optional)
- D, 19 Mixing Elbow, Seawater Outlet

- | | |
|--|---|
| <ul style="list-style-type: none"> 1 – * 7 x t4.5 Rubber Hose 2 – W-C S.D. 3 – Fuel Injection Pump 4 – Fuel High-Pressure Pipe 6.35 x t2.175 STS 5 – Lubrication Oil Filter (cartridge type) 6 – Lubrication Oil Cooler 7 – 4.76 x t0.7 Double-Walled Steel Tube 8 – 10 x t3 Rubber Hose 9 – 13 x t3.5 Rubber Hose 10 – Oil Pressure Switch 11 – Oil Pressure Sensor 12 – Fuel Injection Nozzle 13 – Piston Cooling Oil Jet 14 – Seawater Inlet 15 – 8 x t0.8 STKM 16 – Clutch Lubrication Oil Cooler 17 – Turbocharger 18 – 17 x t1.2 STKM 19 – Mixing Elbow 20 – 8.5 x t3.5 Rubber Hose 21 – 17 x t3 Rubber Hose 22 – Heat Exchanger 23 – Main Bearing 24 – Lubrication Oil Inlet Filter 25 – 25.4 x t4.3 Rubber Hose 26 – 25.4 x t4.3 Rubber Hose 27 – 7.5 x t2.5 Rubber Hose 28 – 25.4 x t4.3 Rubber Hose 29 – Cooling Water Pump (seawater) 30 – 28 x t4 Rubber Hose 31 – 28 x t4 Rubber Hose 32 – Hot Water Connection Outlet 33 – Coolant Temperature Switch 34 – Thermostat 35 – Cooling Water Pump (coolant) 36 – Hot Water Connection Return 37 – Coolant Temperature Sensor (option) 38 – Lubrication Oil Pump 39 – Pressure Control Valve 40 – 13 x t3.5 Rubber Hose 41 – 10 x t3 Rubber Hose 42 – Diesel Fuel Filter (cartridge type) 43 – * 7 x t4.5 Rubber Hose 44 – * 7 x t4.5 Rubber Hose | <ul style="list-style-type: none"> 45 – * 5 x t4.5 Rubber Hose 46 – Diesel Fuel Inlet 47 – Fuel Overflow 48 – To Block 49 – From Head 50 – To Camshaft 51 – To Oil Pan 52 – Detail of Part A 53 – Detail of Part B 54 – Detail of Part C 55 – Detail of Part D |
|--|---|